 


www.CamOneTec.com

FlyCamOne eco Full HD 1080p

Manual for versions with lenses 96° (Art. No. FCHD80) and 142° (Art. No. FCHD80-B)

Please read this manual before you use the product!
(Available for download as PDF at www.CamOneTec.com)

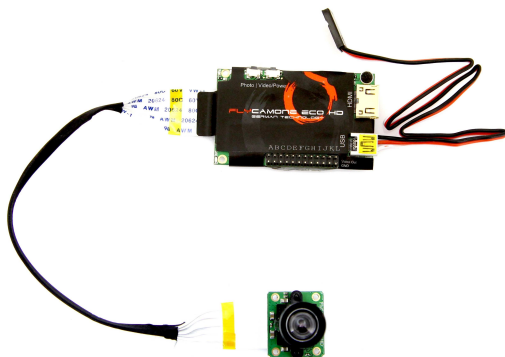

Vers.:1.0

Sicherheitshinweise

WARNUNG:

BEACHTEN SIE FOLGENDE HINWEISE,
UM STROMSCHLÄGE ODER SCHÄDEN
AM PRODUKT AUSZUSCHLIESSEN:

- SETZEN SIE DAS GERÄT NICHT REGEN,
FEUCHTIGKEIT, TROPF- ODER
SPRITZWASSER AUS
BRINGEN SIE DAS GERÄT
- VERWENDEN SIE AUSSCHLIESSLICH
EMPFOHLENE ZUBEHÖRTEILE
- DEMONTIEREN SIE NICHT DAS GERÄT
- IM INNERN BEFINDEN SICH KEINE TEILE,
DIE VOM BENUTZER GEWARTET
WERDEN KÖNNEN.
LASSEN SIE WARTUNGSARBEITEN VON
QUALIFIZIERTEN KUNDENDIENST-
MITARBEITERN DURCHFÜHREN.

SERVICE & SUPPORT

ACME the game company GmbH
Boikweg 24

33129 Delbrück
Germany

Tel: +49 2944 973830

service@acme-online.de
oder
<http://www.CamOneTec.com>

ACHTUNG

Wenn ein Akku nicht ordnungsgemäß
angeschlossen wird, besteht Explosionsgefahr.
Verwenden Sie stets Akku einen vom Hersteller
empfohlenen Akku. Entsorgen Sie alte Akkus
entsprechend den Anweisungen durch den
Hersteller.

Es besteht Brand-, Explosions- und
Verbrennungsgefahr.
Vermeiden Sie die Erhitzung des verwendeten
Akkus über
die unten genannte Temperatur und
verbrennen Sie sie nicht.
LiPo-Akku <50°C

CE Deklaration

Hiermit erklären wir, dass dieses Modell den
grundlegenden Anforderungen und den anderen
relevanten Vorschriften der Richtlinie
2004/108/EG entspricht. Eine Kopie der
Konformitätserklärung kann unter der oben
genannten Adresse angefordert werden.



WEEE Reg. Nr.: DE64989527

**Benutzerinformation zur Entsorgung von
elektrischen und elektronischen Geräten**
Entsprechend der Firmengrundsätze der
ACME the game company GmbH wurden
hochwertige wiederverwertbare Komponenten
in diesem Produkt verbaut. Dieses Symbol auf
Produkten und/oder Begleitdokumenten
besagt, dass das Produkt am Ende der
Lebensdauer getrennt vom Hausmüll entsorgt



Dieses Produkt kann mit einem externen LiPo-Akku betrieben werden. Bringen Sie verbrauchte Akkus zu einer dafür vorgesehenen Sammelstelle.

werden muss.
Bringen Sie diese Produkte, auch den Akku, zur ordnungsgemäßen und umweltfreundlichen Entsorgung zu Ihrer nächsten Sammelstelle (bzw. Recyclinghof).

Der Hersteller haftet nicht für den Verlust von Aufnahmen durch Fehlfunktion oder für Defekte des Gerätes, Speichermediums oder des Zubehörs.

BEACHTEN SIE: Die Privatsphäre anderer Personen ist auch gesetzlich geschützt und sollte tabu sein. Das Aufzeichnen Dritter kann eine strafbare Handlung sein. Sie sind für Ihr Handeln verantwortlich.


Index

Content.....	4
Activation.....	5
Buttons/ Status-LED.....	6
6	
Connections.....	7
Technical Data.....	7
7	
Memory cards / Read data.....	8
8	
FPV – solutions.....	9
9	
Recommended accessories.....	10
10	
Accessories.....	11
DIY for makers – Software programming.....	11


Content

Please check the completeness before using the product!

 ENGLISH

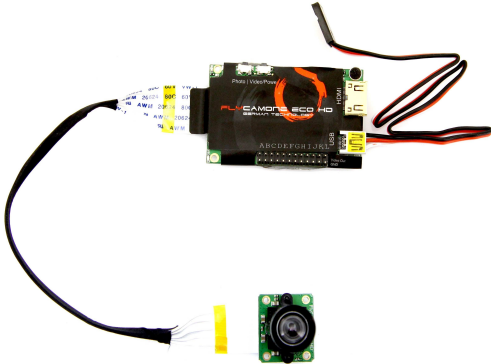

1x FlyCamOne eco Full HD 1080p camera

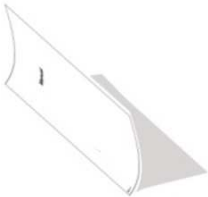 

Manual
(Online at www.CamOneTec.com)

The following is needed for further operation:

For universal use without a direct power supply through your RC- Receiver, we recommend a battery from our FlyCamOne series (3,7V 1S | 220 mAh -1000 mAh).

Micro-SD card (min. class 4 / 4GB)

www.CamOneTec.com

FlyCamOne eco Full HD 1080p

Have fun with the successor of our smallest and lightest camera! Equipped with finest Full HD resolution and more functions at the same size, this camera is a highlight especially for FPV- fans.

With the separate camera head (96° or 142° lens), the open video interface, a Video-, Photo- and Serial Photo- mode it is the most universal Full HD camera in the world – and this at a weight of 19g only. As usual, the camera can be mounted even in smaller RC models almost invisibly.

The FlyCamOne eco Full HD can also be combined with our Video Transmission Sets (more Information at www.CamOneTec.com).

The main board of the camera can be connected to your RC model and does not need any further power supply by an external battery.

For universal use without a direct power supply through your RC- Receiver, we recommend a battery from our FlyCamOne series (3,7V 1S | 220 mAh -1000 mAh).

The sharp recordings can be saved on a micro SD- card and also be watched via Mini HDMI- or AV-cable on your TV or through USB on your computer.

As an additional highlight, we offer technical addicted camera fans the possibility to program their own camera functions and to develop new ideas. More information is available on www.CamOneTec.com

Activation

! Test the functionality of the camera before you install it inside the model and keep in mind that the camera does not have an own battery. Be sure to handle the ribbon cable with care.

Slide the locker of the micro SD slot carefully in direction of the ribbon cable. Pull up the cover and insert the micro SD card (min. Class 4 / 4 GB) according to the holes in the slot. Close the cover and then slide the locker back again.

Now connect the camera to a free switchable channel of your RC receiver. Pay attention on the correct polarity of the cable!

For universal use without a direct power supply through your RC- Receiver, we recommend a battery from our FlyCamOne series (3,7V 1S | 220 mAh -1000 mAh | more information page 10). Please connect the battery to the provided battery socket.

After you have connected the FlyCamOne eco Full HD 1080p camera to a power source, keep pressed the Power button for several seconds. The red LED flashes shortly and then the green LED will light up constantly. The unit is now ready for use.

Please note that damages resulting from improper use or connection of an unsuitable power source are not covered under warranty. Perform this work carefully and be sure to know about the dangers and technics. Make sure that the used power source has sufficient capacity.

Buttons/ Status LED

Green LED

Photo-button

Video- / Power- (keep pressed) button



Red LED

- Switch ON/OFF:** Keep pressed the Power button for 5 seconds. The red LED flashes shortly. As soon as the camera is ready for use, the green LED will light up constantly.
- Photo:** Press the Photo button shortly. The red LED flashes. The photo is saved now.
- Video:** Press the Video/Power button shortly. As long as the recording is running, the red LED lights up constantly. To stop recording, press the button again. The red LED stops flashing when the recording has stopped.
- Battery status:** The green LED starts blinking as soon as the voltage has reached a critical point.


Memory card: If no memory card has been inserted, both LEDs will flash.

Connections

Photo Video / Power (keep pressed)



 - A UART Control
- B UART Control
- C UART Control
- D UART Control
- E UART Control
- F Function LED

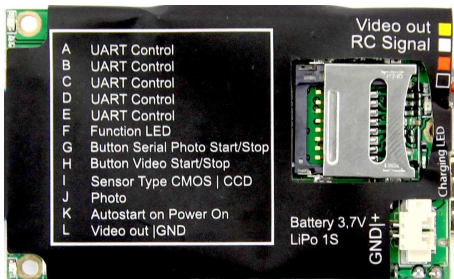

Technical Data

Size:	53x32x5mm
Weight:	19g
Lens:	96° or 142° (exchangeable)
Cable length:	Lens 195mm RX 300mm
Bitrate:	15Mbit max
Power supply:	3,7 V 1S LiPo 5,6V via RC-receiver
Power consumption:	540mA
Operation temperature:	0° C ~ +50° C
WiFi:	optional with CamOne eco WiFi PCB
Videoresolution:	Full HD 1080p
Photoresolution:	5 MPix
File format:	.mp4 (Video) .jpg (Photo)

Compatible memory cards



Use Micro-SDHC-memory cards with minimum „Class4“. The camera can work with cards that have a capacity of up to 32GB.

We recommend “Rapid Rush“- cards with min. 8GB capacity.

At 32GB up to 4,5 hours of highest resolution can be recorded.

Read data

The Videos can be watched in a simple and fast way on your computer.

We recommend the "VLC Player" (Freeware)

↳ Festplatten

It is available for Download at www.vlc-player.org.



Connect the camera to your computer by using a Mini- USB cable. Switch on the camera.

↳ Geräte mit Wechselmedien



DVD-RW-Laufwerk (E:)

The camera will be recognized as a hardware device. Your recordings are saved in this folder.



Wechseldatenträger (H:)

613 MB frei von 1,90 GB

FPV – Solutions

Experience the ultimate flight experience from pilot's view!

"First Person View" ("Pilot's view") is one of the key disciplines in RC flight. The scene grew fast. In the past it was hard to combine working components to get the best setup. Either the range was not sufficient, the model too heavy, the quality too bad or the components just did not work together. To put an end to this confusion, we have designed and developed complete systems to offer you the best solution.

The most used setup (no matter if FPV-Fans, Filmcrews or Editors) is the following:



Djb100	Dji Phantom Quadcopter
FCHD80	FlyCamOne eco Full HD 1080p Camera
FCHD38	FlyCamOne FPV-Head with 2 servos
FCHD91	Video Transmitter 5.8GHz 25 mW
FCHD72	FlyCamOne HD 7" Screen 5.8 GHz Dual-Receiver (Diversity)
FCHD08	FlyCamOne HD V-Eyes Set

More information at

www.CamOneTec.com

www.CamOneTec.com

Recommended accessories

FlyCamOne HD 7" Screen 5.8 GHz Dual-Receiver (Diversity) – Art. No. FCHD72



Video Transmitter 5.8GHz 25 mW – Art. No. FCHD91



FlyCamOne HD Transmission Set 5.8GHz - Art. No. FCHD03



- Compatible to FlyCamOne HD 720p, FlyCamOne HD 1080p, CamOne infinity 1080p, FlyCamOne HD eco 1080p
- Range 300m

FlyCamOne HD V-Eyes Video Goggles - Art. No. FCHD08



- Compatible to
FlyCamOne eco Full HD, FlyCamOne HD
FlyCamOne HD 1080p CamOne infinity 1080
- Integrated head tracker for
Moving the camera head
- Including base for connection to FlyCamOne HD
Transmission Set 5.8GHz

More information and products at www.CamOneTec.com

**FlyCamOne eco Full HD
1080p Accessories**

These accessories are only compatible to the FlyCamOne eco Full HD 1080p.

Art.-Nr.:	EAN	Article
FCHD72	4260033 046413	FlyCamOne HD 7" Screen 5.8 GHz Dual-Receiver (Diversity)
FCHD02	4260033 049520	FlyCamOne HD Screen 2,5"; 150cm cable
FCHD08	4260033 049582	FlyCamOne HD V-Eyes Set; incl. 433MHz remote
FCHD92*	4260033 047922	Video Transmitter 5.8GHz 200mW*
FCHD93*	4260033 047939	Video Transmitter 5.8GHz 500mW*
FCHD91	4260033 047496	Video Transmitter 5.8GHz 25 mW
FCHD03	4260033 049537	FlyCamOne HD Transmission Set 5.8GHz;
FCHD15	4260033 049650	FlyCamOne HD GPS Module
FCHD20	4260033 049704	FlyCamOne HD HDMI Cable
FCHD10	4260033 049605	FlyCamOne HD Linse 170° Weitwinkel (30BPS)
FCHD09	4260033 049599	FlyCamOne HD Linse 133° Weitwinkel (30BPS)
FCHD38	4260033 049889	FlyCamOne FPV-Head with 2 servos
FCHD43	4260033 048578	FlyCamOne USB Power adaptor
FC3104	4260033 048721	5.8GHz Transmitterset Patch Antenna + 500m
FCHD07	4260033 049575	FlyCamOne HD Motion sensor with 120cm Cable
FCHD58	4260033 047588	FlyCamOne HD RX Cable
FCHD24	4260033 049742	FlyCamOne HD Cable extension 200cm
FCHD21	4260033 049711	FlyCamOne HD AV Kabel
FC2006	4260033 042064	FCO ² LiPo Battery 220 mAh
FCHD17	4260033 049674	FlyCamOne HD LiPo Battery 600 mAh
FC3012	4260033 048486	FCO ³ LiPo Battery 1000 mAh

* Usage prohibited inside the EU.

DIY for makers – Software Programming

The camera can be customized according to your needs and wishes. This is possible by saving the AT- commands directly onto the camera.

More information available at
www.CamOneTec.com