

**Wireless FPV Monitor
with Dual Receiver(Build-in DVR)
LCD Monitor**



User Manual

Product description:

Wireless FPV monitor with dual receiver (build-in DVR) LCD monitor is a new multi-function product; adopt advanced integrated circuits and high-quality new HD LCD monitor. It integrates a high-sensitivity dual 5.8GHZ AV wireless receivers, Aerial receiver, Video recorders, high-definition monitor, not only can conduct on-site wireless receiver, video, but also can seamless video, real-time image snapping and video playback. The monitor build-in battery, if you don't install the battery, you can use the 9~18V power supply or use the battery plate for external power supply. The Monitor casing compact, easy to operate, can be used for FPV ground station, car video monitors (macrograph), Security monitoring, baby monitors, photography viewfinder, construction site video surveillance, advertising and other venues.



To insure best use of the unit, please read the user's manual carefully.

CAUTION

1. Do not use any damaged or leaking battery and please replace the battery immediately if its working life becomes short significantly
2. Do not expose this product to direct sunlight, heat or humid conditions
3. Keep away from strong light while using this product so as to obtain the clearest and the most colorful picture. Please use sun shade for the outdoor necessary
4. Please avoid heavy impact or drop on the ground.

5. Do not use chemical solutions to clean this unit. Please simply wipe with a clean soft cloth to keep the brightness of the surface.
6. Without adjustable component in the unit, please do not take apart or repair the unit by yourself, to avoid damage the product.

Product feature:

- **Dual antenna receiver, high-sensitivity, strong
Anti-interference**
- **Set DVR, wireless receiver, a monitor for the integration
Of Multi-functional combination machine, compact,
Suitable for a variety of purposes**
- **Real-time image snapping, keeping the beautiful memory.**
- **DVR seamless video, save the latest data**
- **Motion detection recording, save memory space5.8G**
- **wireless receiver, 32-channel selection, effectively avoid
signal interference**
- **High brightness, contrast, anti-glare screen with a sun shade,
sun clearly visible**
- **with VIDEO input, output, HDMI input, suitable for a variety
of sources. Can be used as video, photography Viewfinder,
advertising machine.**
- **Color Control Systems support, enter the menu to manually
Select the appropriate format, and adaptable**
- **Front headphone monitors playback audio effects**

- **Build-in battery and rear battery plate, can be equipped with A Variety of battery, No power to facilitate use of the site in Country**
- **with VIDEO signal output function, can be used as video Playback DVR host, connecting multiple monitors.**
- **Check Field**
- **Picture Screen Markers and Center Marker**

CONTENTS

1. Product description -----	4
2. DVR (Video) instruction -----	7
3. Wireless transmit receiver operation --	17
4. Operation instruction -----	19
5. Sun shade installation and remove ----	24
6. Power Supply -----	26
7. Parameters -----	29
8. Trouble shooting -----	31

1.Product description:

1.1 Front panel instruction:



1. Video Indicator

2. Power Indicator

★ 3 ~ 8 DVR operation button

3. SC.SHOT: Real-time images snapping

4. REC/OK: Recording start, stop/function confirm

5. MODE: Mode button to enter/ exit the playback mode

6. MENU: Menu key to enter / exit the DVR (Video) menu mode


7. UP: UP button, up an option

8. DOWN: Down button, down one option

 
★ 9 ~ 12 **Monitor operation button**

9. +: Volume up, press this key to increase the volume control,


Menu item selection for settings adjustment

10. —: Volume down, press this key to decrease the volume control, menu item selection for settings adjustment
11. MENU: Monitor menu key, under a signal input mode, press this button to call up the menu, and the current menu and sub-menu item to confirm the adjustment
12. SOURCE/EXIT: Input signal selection or exit the menu
13. : Stereo earphone jack
14. LED screen

1.2 Rear battery plate instruction:

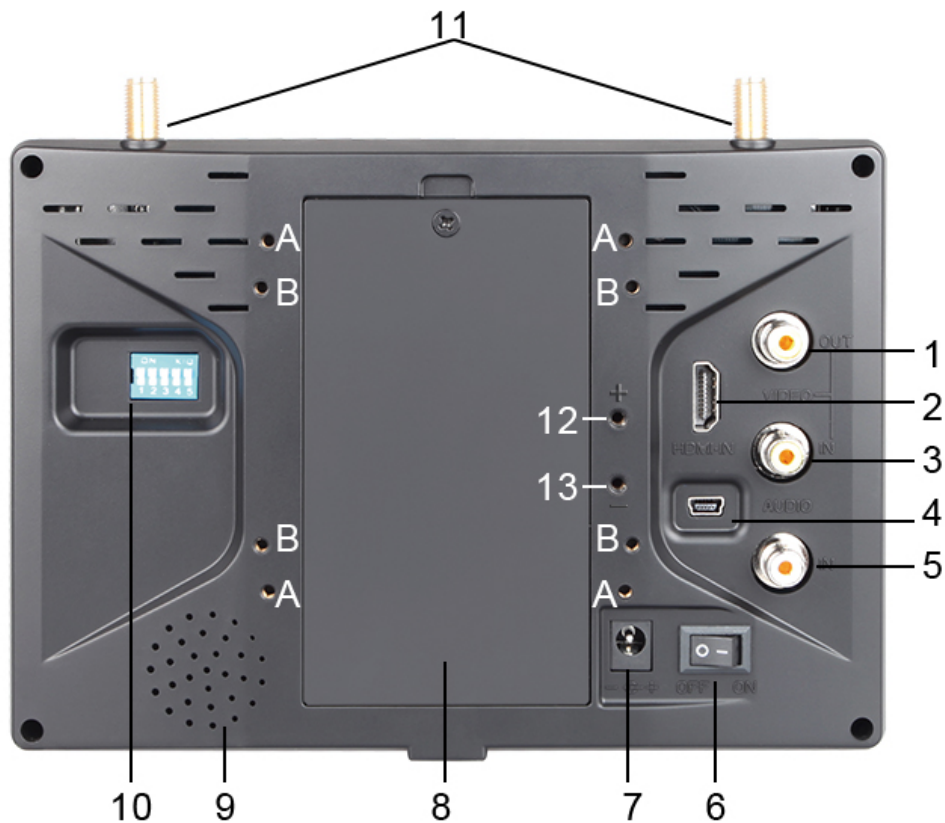

1. VIDEO OUT: Composite video signal output
2. HDMI: HD HDMI signal input
3. VIDEO IN: Composite video signal input

4. USB data ungrade port
5. AUDIO IN: Audio signal input
6. Power switch “—”Indicates that the power is turned,
“○”means Disconnect the power
7. Power input jack 
8. Battery Pack
9. Speaker
10. 32 channel bar
11. Antenna
- 12、 13: it is a screw hole for battery plate, when you use battery external,12 is“+”, 13 is“-”,Copper Screw size:M3×9.5mm
- A: Battery plate locking screw hole, 4 holes, Copper Screw size: M3×5.0mm
- B: 75×75mm VESA, Screw size: M4×5.0mm

1.3 TF Card Slot:

 


2. DVR (Video) Operation instruction:

When the monitor's "VIDEO-IN" and "AUDIO-IN" has access to the appropriate signals or "RF" wireless receiver transmitter has been reliably received video signal transmitted over and check the TF card has been reliably into the slot (monitor without the HDMI input, there is no video function)


After the device is turned on, press "SOURCE/EXIT" to select "DVR" channel, press "REC/OK", then the monitor will be on "RF" channel, if you would like to "VIDEO", press "SOURCE/EXIT" again to change to VIDEO.

2.1 DVR (Video) button instruction:

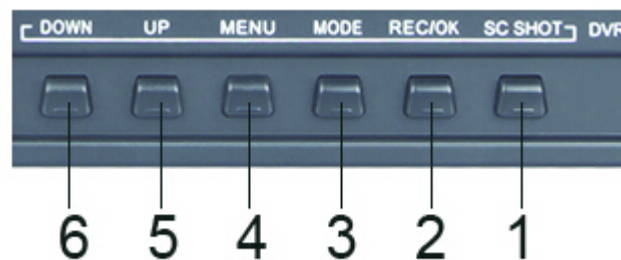


1. SC.SHOT: Real-time images snapping
2. REC/OK: Recording start, stop/function confirm
3. MODE: Mode button to enter/ exit the playback mode
4. MENU: Menu key to enter / exit the DVR (Video) menu mode
5. UP: UP button, up an option
6. DOWN: Down button, down one option

2.2 Recording start:

The monitor input signal selection "**DVR**" (video signal) channel, the monitor screen will display the "RF" channel of the screen, press the "**REC / OK**" button will appear when the red flashing , meaning that start recording begins, the DVR default to RF channel, if you would like to "VIDEO" channel, press "SOURCE/EXIT" to switch(HDMI input without recording function). If you want to stop the recording and press "**REC / OK**" button. Recording or recording by time period paragraphs packaged storage.

2.3 Video playback:

When the video for some time, you need to playback video effects observed, press "**MODE**" button at the top left appears , because the video store is packaged stored by time period, can use "**UP / DOWN**" keys to go forward or backward to select playback file package, select and press the "**REC / OK**" button to confirm, the device begins to enter the playback mode. Playback with the "**DOWN**" button to select the playback speed, return fast play with "**UP**" key in order to exit. When fast playback is muted trumpet, playing at normal rate for a voice broadcast.

2.4 Screen shot (SC.SHOT function)

Under VIDEO or RF, Press the "SC.SHOT", then can be store the rear-time images (make sure TF card insert) ,if want to

 
review these images, please press **MODE** to enter the

, then use UP/DOWN to select the  folder to see them.

2.5 DVR Menu Operation


Video setting:

Press "MENU" button to enter the video settings menu

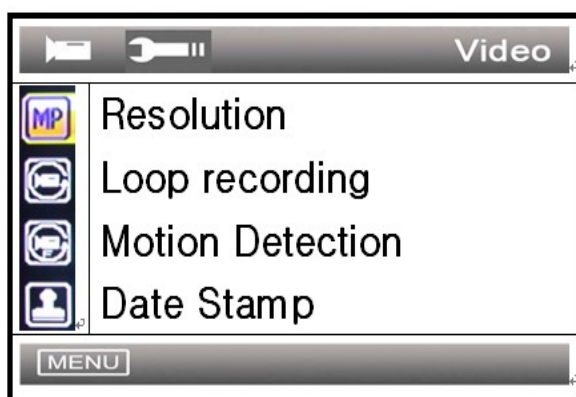


Resolution

 D1(720×576),VGA(640×480)QVGA (320×240),The higher resolution, the sharper, the larger of the file size.

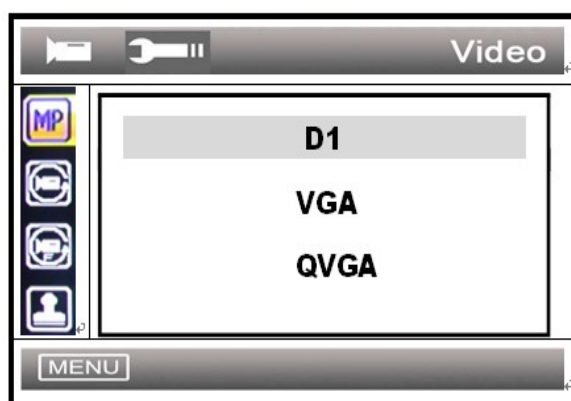


Loop recording

 SD card is full, it will overwrite the oldest files cycle, and the system uses a unique algorithm, SD card DVR longer life than ordinary

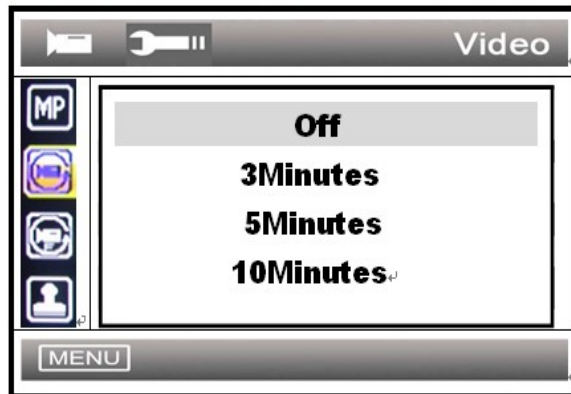


Motion Detection

 After opened, the moving object is detected, it will Automatically record.

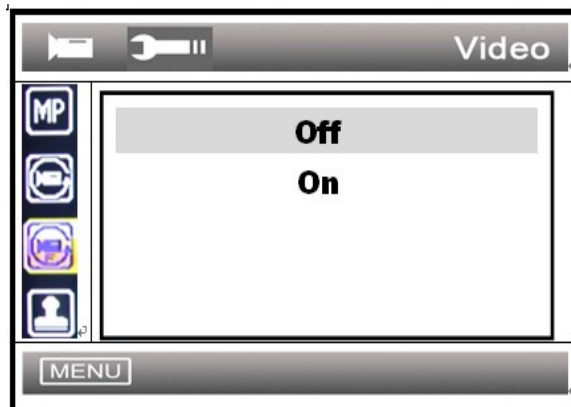

Date Stamp

 Date and time can be superimposed onto the video, you can not stack.

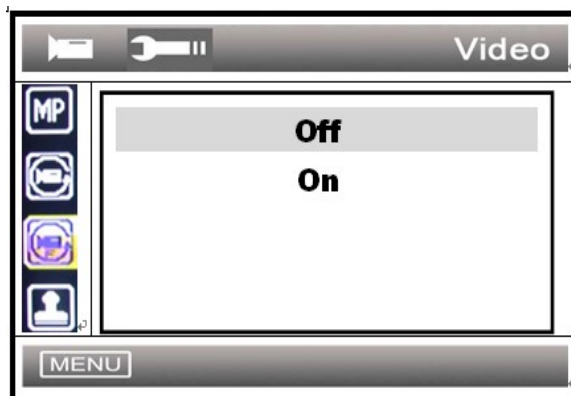



Recording Video

You can choose to record video directly to a file or not record

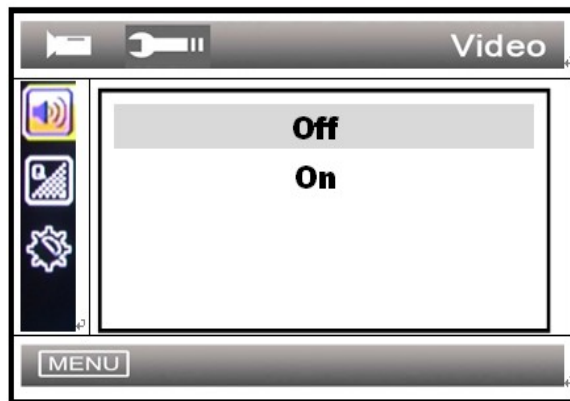 



Image quality

The higher the image quality, image clearer, the file will be bigger




Motion detection sensitivity

 Can be adjusted according to the actual situation.

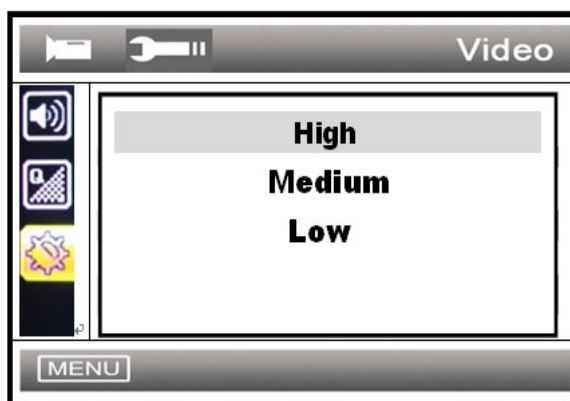

2.6 Advanced Settings

 
Continuous twice press the "MENU" button to enter the MENU in the advanced Settings option

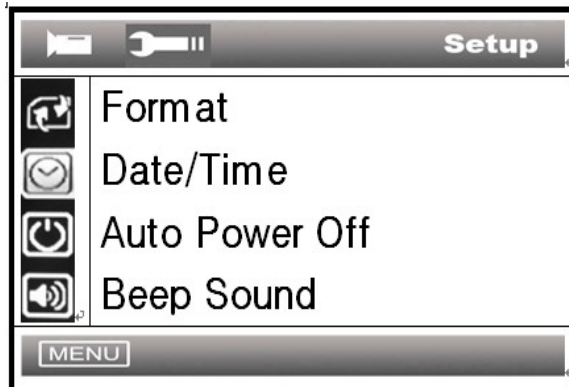

Formatting

First use, in order to optimize the file system, VCR will Require customers to format again. Once formatted files will be lost.

 After entering format mode, press "REC/OK" button to confirm, the menu prompts

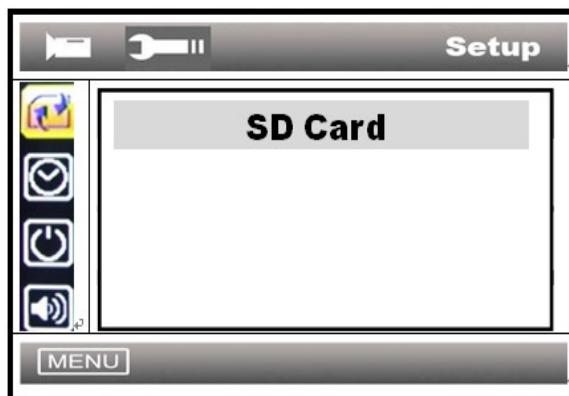


Press the REC/OK "button again, choose cancel or confirm whether the memory card is formatted





Date/time

 "REC / OK" button to confirm selection and adjustment, "UP / DOWN" keys to change the date or time, "MENU" to exit

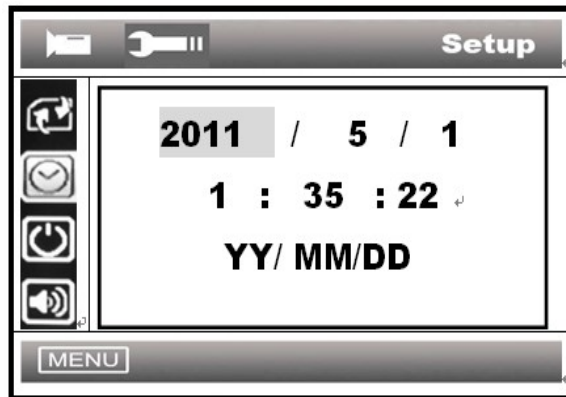

Auto power off (This unit without this function)



Beep Sound (This unit without this function)



Language setting

Press the "REC / OK" button to confirm, with the "UP / DOWN" keys to select the desired national language, then press "REC / OK" button to confirm. There are nine national languages choice

 
English Deutsch François Espanol Italiano
Portugues 繁體中文 简体中文 日本語






Light source frequency(This unit is not used)

Refresh rate and the time taken to set the grid frequency synchronization

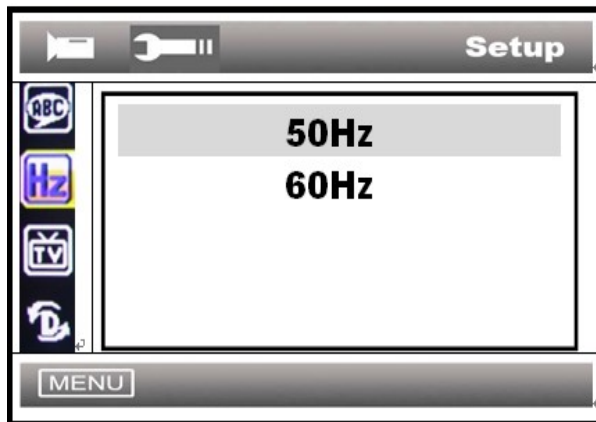

TV mode

 
Output formats PAL / NTSC for option depends on country to set

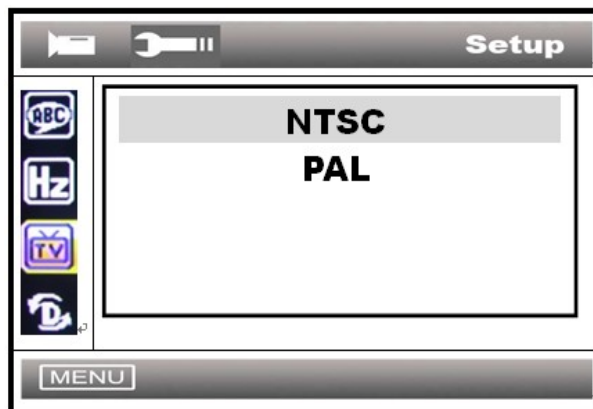


Note: If after set the TV output formats, image cannot be synchronized, or even can't bring up the DVR menu, is the DVR output formats are not synchronized to the monitor format due, if this occurs, you can call up the monitor menu, enter the menu of "function" to set "Format" in the corresponding format option

Default Settings

 
Restore the factory default Settings

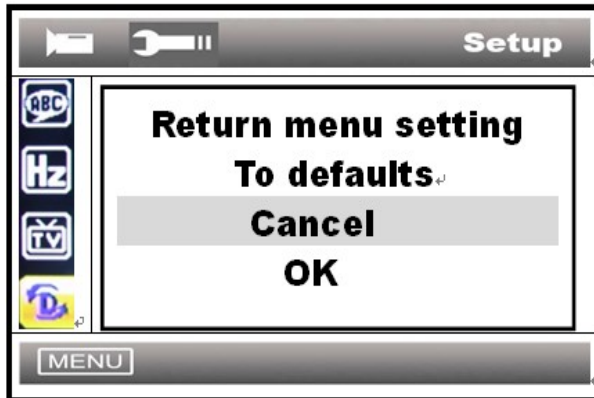

2.7 Playback menu Settings

 
Press the "MODE" button, in the top left of the screen will display , press the DVR menu key "MENU", and enter the playback menu settings. (At this point if you press the "REC / OK" button to enter the playback, unable to enter the playback menu settings)




 Delete, delete the unwanted content.



Delete single

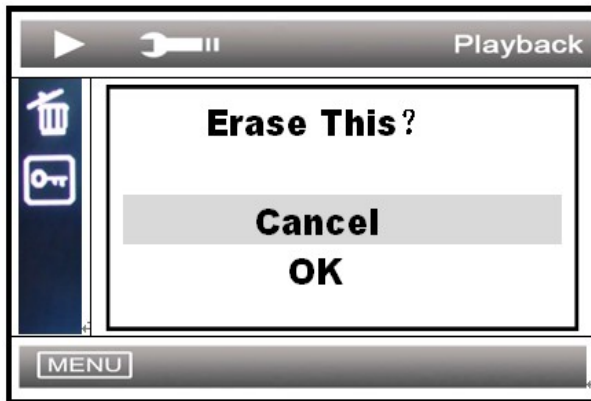

Delete All

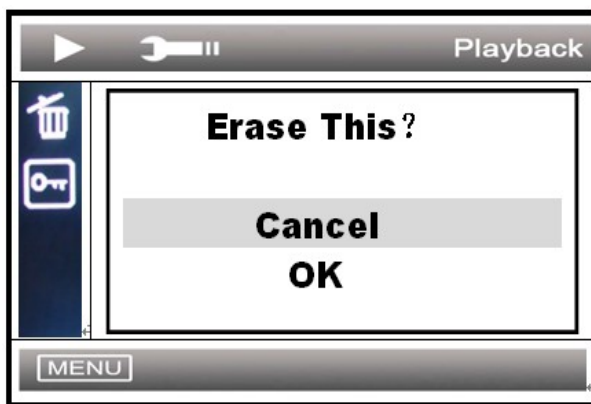 

Protection, to save the contents of the lock protection to prevent misuse deleted and lost



3 Wireless transmission receive operation



Take the form a complete set of the antenna assemble on the unit's antenna input ports, the assembly should secure, locked on the buckle.

3.1 Channel selection

Wireless transmitter channel and receiver channel must be strictly consistent; otherwise it will not receive a transmitter signal.

This unit offers 32 receiver channels for setting ,it can accept simultaneously multi transmitters and receivers together work, to avoid co-channel interference

(Frequency range of each region are different, please check the unit's paste instructions).

		SW(3P:1P)							
SW 4P	SW 5P	000	001	010	011	100	101	110	111
0	0	CH1 5865MHZ ON OFF 1 2 3 4 5	CH2 5845MHZ ON OFF 1 2 3 4 5	CH3 5825MHZ ON OFF 1 2 3 4 5	CH4 5805MHZ ON OFF 1 2 3 4 5	CH5 5785MHZ ON OFF 1 2 3 4 5	CH6 5765MHZ ON OFF 1 2 3 4 5	CH7 5745MHZ ON OFF 1 2 3 4 5	CH8 5725MHZ ON OFF 1 2 3 4 5
1	0	CH1 5733MHZ ON OFF 1 2 3 4 5	CH2 5752MHZ ON OFF 1 2 3 4 5	CH3 5771MHZ ON OFF 1 2 3 4 5	CH4 5790MHZ ON OFF 1 2 3 4 5	CH5 5809MHZ ON OFF 1 2 3 4 5	CH6 5828MHZ ON OFF 1 2 3 4 5	CH7 5847MHZ ON OFF 1 2 3 4 5	CH8 5866MHZ ON OFF 1 2 3 4 5
0	1	CH1 5705MHZ ON OFF 1 2 3 4 5	CH2 5685MHZ ON OFF 1 2 3 4 5	CH3 5665MHZ ON OFF 1 2 3 4 5	CH4 5645MHZ ON OFF 1 2 3 4 5	CH5 5885MHZ ON OFF 1 2 3 4 5	CH6 5905MHZ ON OFF 1 2 3 4 5	CH7 5925MHZ ON OFF 1 2 3 4 5	CH8 5945MHZ ON OFF 1 2 3 4 5
1	1	CH1 5740MHZ ON OFF 1 2 3 4 5	CH2 5760MHZ ON OFF 1 2 3 4 5	CH3 5780MHZ ON OFF 1 2 3 4 5	CH4 5800MHZ ON OFF 1 2 3 4 5	CH5 5820MHZ ON OFF 1 2 3 4 5	CH6 5840MHZ ON OFF 1 2 3 4 5	CH7 5860MHZ ON OFF 1 2 3 4 5	CH8 5880MHZ ON OFF 1 2 3 4 5

		SW(3P:1P)							
SW 4P	SW 5P	000	001	010	011	100	101	110	111
0	0	5865	5845	5825	5805	5785	5765	5745	5725
1	0	5733	5752	5771	5790	5809	5828	5847	5866
0	1	5705	5685	5665	5645	5885	5905	5925	5945
1	1	5740	5760	5780	5800	5820	5840	5860	5880



Note! During select channels must be supporting the transmitter

3.2 Wireless Receiver:

Turn on the monitor power switch, press the button on the monitor "SOURCE / EXIT" Select "RF", if the time transmitter has worked, receiver and transmitter frequency in agreement, the receiver will receive the signal sent from the transmitter and displayed on the monitor

Note: The effect of receiving the distance has a great relationship with the reception power of the transmitter and the receiver venues. If the reception is poor, the antenna can be replaced with three leaves, four leaf antenna or panel

antenna. Replace the antenna should pay attention to the antenna and receiving the same frequency.

4. Operating instructions:

This monitor with HDMI, VIDEO, AUDIO input and VIDEO output port, suitable for a variety of usage environments. From VIDEO, AUDIO DVR video input can be entered recording(HDMI without recording function), VIDEO output signal can be straight-through video signal , can also be the DVR replay video signal (consistent with the image displayed on the screen).

4.1 Button instructions:



1. **+**: This unit in working condition without displaying the menu, press it the volume up . Menu is displayed, this button as a menu item selection. In the submenu item adjustment is determined, this button as value up adjustment or adjustments selection
2. **-**: This unit in working condition without displaying the menu, press it the volume down . Menu is displayed, this button as a menu item selection. In the submenu item adjustment is determined, this button as value down adjustment or adjustments selection

3. **MENU** : Press " MENU " button, pop up OSD menu, press this button again to enter the sub-menu, then press once adjusted for the sub-menu item to confirm, then, you can press the button "+" or "-" to adjust the value adjustment or selection, press MENU to confirm.
4. **SOURCE/EXIT**: The input signal switch button. When entering the menu operation for menu exit button
5. When Recording start to begin, the indicator will be flash with blue color.

The operation of the key

Press button 4 (**SOURCE / EXIT**) to select **HDMI, video, RF, DVR** input signals

Select **HDMI**, HD multimedia digital signal from the HDMI input port;

Select the **video**, ordinary video signal from the video input port;

Select **RF**, 5.8 G RF input signal directly, image display more clearly.

 
Select **DVR** to enter into DVR video channel, displayed on the screen at this time is images from the DVR video output, access DVR channel for corresponding functions. When the DVR video recording, video indicator light 5 (blue) flashes. In the first use of TF card or switch to a new TF card, should format TF card in the channel (DVR).

4.2 Menu instructions

Press "MENU" to enter the menu, use the "+" or "-" button to select "Color", select it and press "MENU" button to confirm, enter the "Color" submenu Operation, use the "+" or "-" button select the

adjustment item. After selected adjustment item, press the "MENU" once again to confirm, then use the "+" or "-" button to adjust or choose specific parameters. After adjusting the value or setting, press "MENU" to confirm, press "SOURCE / EXIT" key to exit the OSD menu.


Color

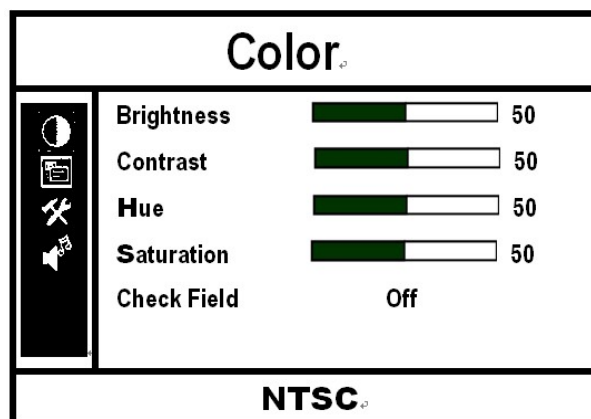

- ※ **Brightness:** To adjust the image's brightness.
- ※ **Contrast:** To adjust the brightest and darkest ratio of the image, please note the sense of picture when adjust, proportion too large or small, will make the picture lose the color of showy.
- ※ **Hue:** On NTSC Video mode, the image color tint difference is adjustable by tint.
- ※ **Saturation:** To adjust color concentration
- ※ **Check Field:** Switch on/off Check Field (Red、 Green、 Blue、 Monochromatic and Color)




 OSD

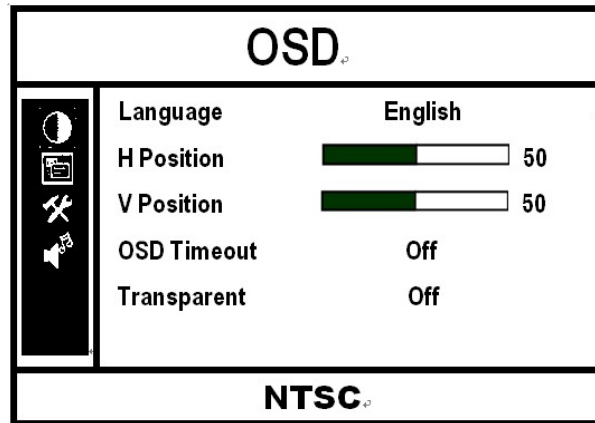

※ **Language:** Languages for OSD as below:

 English、简体中文、Francois、Italia no、Deutsch
Español、日本語、한국의、Pycc、Portuguesa

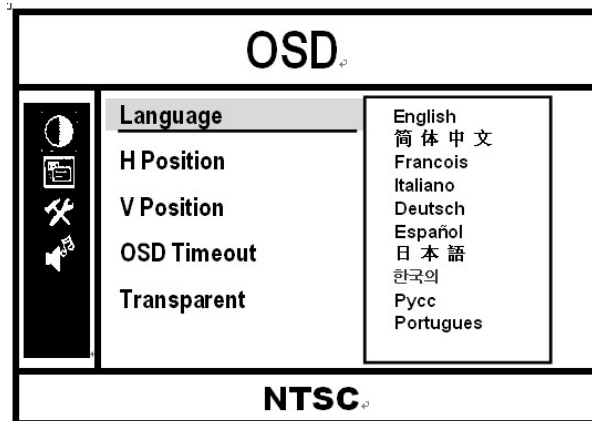







※ **H Position:** To adjust the OSD position in horizontal.

※ **V Position:** To adjust the OSD position in vertical.

※ **OSD Timeout:** To adjust the clock.







※ **Transparent:** To adjust the level of transparent.

Function

Function	
	Reset
	System NTSC M
	Display Ratio 16: 9
	Screen Markers 90 %
	Centre Markers Off
	Camera Off
NTSC	

※ **Reset:** Back to original setting.

 ※ **System:** To adjust color video format.

Function	
	Reset
	System
	Display Ratio
	Screen Markers
	Centre Markers
	Camera
NTSC	

 
▶ NTSC M
 PAL M
 NTSC BG
 PAL N
 NTSC DK
 PAL DK
 PAL I
 SECAM BG
 Off

※ **Display Ratio:** To change the display ratio 16:9/4:3.

※ **Screen Markers:** To adjust screen marker (off, 96%, 93%, 90%, 85%, 80%)

※ **Centre Markers:** To set centre mark (cross mark) display


※ **Camera :** Use the Canon 5 d II or similar camera, the monitor video has real-time images. NO black screen, NO delay, perfect without distortion.

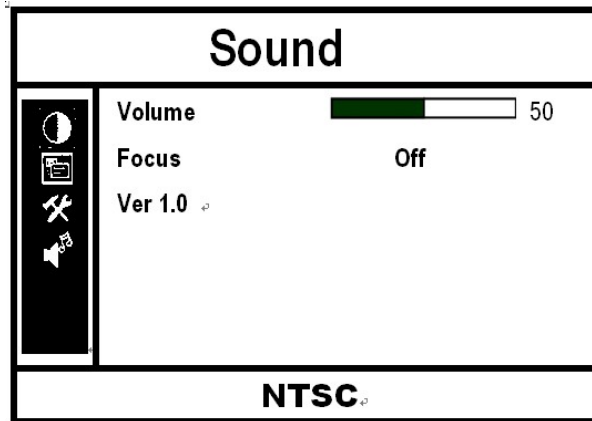


- ※ **Volume**: To adjust the volume.
- ※ **Focus** : As an auxiliary functions (in HDMI mode) when used as the camera viewfinder.
- ※ **Ver.1.0**: Software version number

5. Sun shade installation and remove

 5.1 Installation: Positive parallel alignment of the sun shade and monitor, the projection of the sun shade hanging claw at the monitor sun shade slot (see the monitor front view marked 17), pay attention to the position should be aligned around inserted balanced slide down.

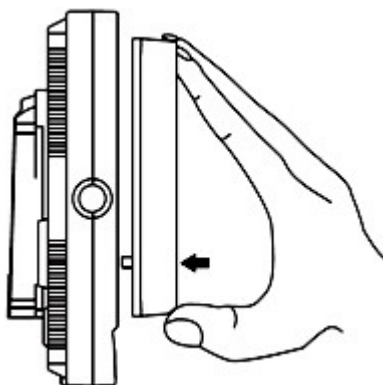


①

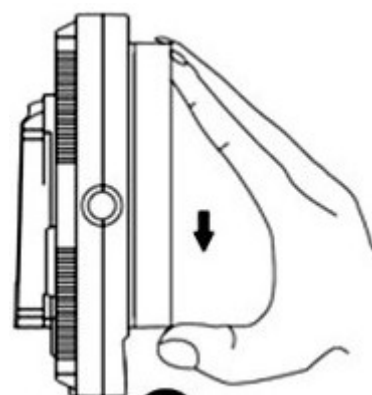 

②

●Sun shade installation view

 
- ① the sun shade's hanging claw and the monitor's sun shade slot should be aligned around inserted balanced to slide down.
- ② By equilibrium of sliding down to match up the sun shade and monitor.
- ③ Please follow steps, otherwise will damage the cover, please do not press the L/R panel of the sun shade, if not, unable open the cover.

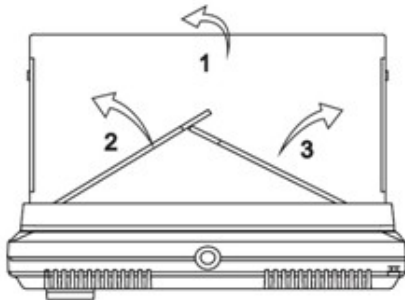


③

5.2 Remove: When you want shade cover is removed from the monitor, hands were clenched monitor and the sun shade, drag up shade cover from monitor that separates the sun shade from the monitor.

 
● **Remove sun shade view:**

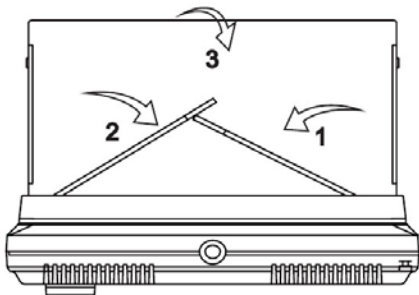

①

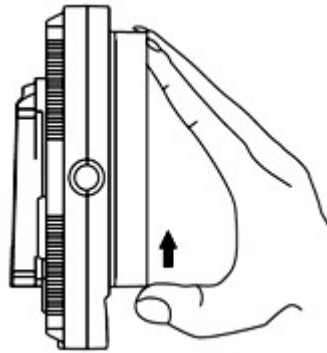 

②

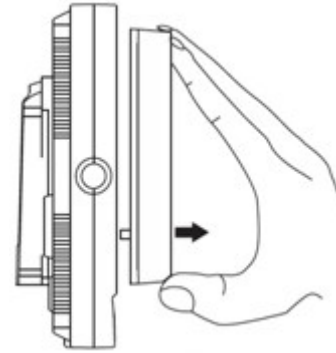 

③

- ① In accordance with the instructions below steps, close the sun shade in sequence
- ② Drag up sun shade balanced to separates the sun shade from the monitor.
- ③ Remove the sun shade

6. Power Supply

There are three versions for power supply:

6.1 Supply by city electricity with power adapter

When the monitor connect the electricity by DC power adapter, red light is illuminated, means is charging, after fully charged, then switch to green light.

When the power switch is on “—”, the monitor is in operation mode, green light is illuminated. If the built-in battery is not fully charged , it still continue to charge the battery, until the battery is full.

To use power adapter supply , it can choose the power adapter(optional) , which matches to the monitor. If the customer need to use the other power adapter, please use the qualified power supply in DC9-18V, $\cong 1.5A$.

6.2 Built-in Battery Power Supply

This model is built-in Li-ion battery capacity: 7.4V-2200mA/h (2Hours) ,after fully-charged, it lasts to work 2 hours.

6.3 External Battery Plate to install battery

When no electricity, in order to longer the battery working hour, the user can install the external battery plate (optional) with battery to supply the monitor power.

When install the external battery plate, please follow“1.2 rearview”Please use the M3×9.5mm copper screw to fasten the two power output cables into NO.12.13 at the back of monitor.When screwing, please pay attention to the polarity, 12 is +; 13 is -.Then match the 4 screw holes of plates to A point at the back of monitor,And use M3×5.0mm copper screw to fasten the plate and monitor.

6.4 Battery Plate:



F970



LP-E6



D28

According to the different requirements of battery for the customers attached different battery plate slots. NO requirements, the factory defaults assembly F970 battery plate.

- F970 battery slot for battery of Sony DV
 Sony F970 F960 F950 T930 F770 T750 F730 F570 F550 F530
 QM91D QM91 QM90D QM90 QM71D QM71 QM70D
 QM70 QM51D QM51 FM71 FM70 series
- LP-E6 battery slot for battery of Canon DV
 Canon LP-E6
- D28 battery slot for battery of Panasonic DV
 Panasonic D55 D54S D54SE D40 D35 D33 D32 D28 D25
 D22 series
- Three types of batteries corresponding to the upper three slots



F970



LP-E6



D28

Remark: Different specifications of the battery, capability is different. The working time for the monitor will be different. Higher capability (working time) will be longer.

6.5 Li-ion Battery

- The working temperature of Li-ion battery is $-20\sim 60^{\circ}\text{C}$, please don't use battery in the place with temperature too low or too high. The power of battery will be reduced if it is working in a low temperature environment. Please don't use the battery in a high temperature environment, as it may cause battery swelling and fire. Please check the temperature of the battery when it is working in a high temperature environment.

- Over- charge and over- discharge, it will cause permanent damage to the positive pole and negative pole of batteries.
No need over discharge then rechargeable every time.
- Period of time to do a deep charge and discharge the battery under the protection circuit control to correct the consumption statistics, but it will not improve your battery's actual capacity
- Please be placed in a cool place to weaken the passivation speed of battery, if you don't use the battery for long time.
- Please charge power stored in the battery to prevent self-discharge of excessive lead to excessive discharge damage if you don't use the battery for long time.

7、 Parameters

Panel size	TFT LCD 7.0inch
Panel type	TFT LCD
Resolution	1024×600×RGB = 1843200 Pixels
Backlight	LED
Dot pitch	0.05(W) x 0.15 (H)
Display ratio	16:9
Brightness	450 cd/m ²
Contrast ratio	700:1
Response time	10ms
Viewing angle	75°/75°(L/R) 70°/75°(U/D)
Input signal	Video/Audio/RF/HDMI
Output signal	Video

Video color system	PAL-4.43 / NTSC-3.58
HDMI support format	480i /480p /576i /576p 720p /1080i /1080p (50/60Hz)
Headphone output	stereo 3.5mm
Input voltage	DC:9~15V
Power consumption	≦ 13W
DVR recording resolution	D1(720×576)VGA(640×480)QVGA(320×240)
DVR support TF card	maximum 32G
DVR Recorded video format	AVI
RF receiving frequency	5.8 G broadband FM audio and video synchronization receiving (other frequencies optional) 32 channel (different frequency range for different region, see specific of the machine's paste instructions)
RF wireless receiving sensitivity	typical value -90dBm
Frequency stability	± 100 ppm
Unit size (mm)	189 (L) x144 (W) x37 (H) mm
Unit weight	560g (Including the battery but without antenna and battery plate)
Installation method	1/4-20 thread mounting holes in the monitor, easy to install on the tripod 75X75cm VESA
Build-in battery	Li-ion 7.4V/2200 mA/h
Working temperature	-20~50℃
Storage temperature	-30~65℃

8. Trouble shooting

8.1 Only black and white or monochrome picture

- ① Please check saturation、 brightness & contrast adjustment.
- ② Please check monitor's "color" from the menu "monochrome" is in black and white or monochrome image or other condition.
- ③ Check whether it is caused by the discrepancy for the DVR playback of video system and monitor system. If that, please enter into the monitor "Function" menu for "Format" option to select the corresponding standard.

8.2 NO picture after put on the power

- ① Check signal cable contact are in good condition, a monitor is synchronized with the input signal, and can press the "SOURCE/EXIT" give it a try. If in the RF channel, please check to see if the transmitter has been work.
- ② Check signal cable connecting, and make sure use the standard adapter connect the monitor. If power supply by battery, please check the battery whether fully charged.

8.3 Images are not synchronized, DVR can't enter the menu

- ① The DVR playback system and monitor system are different, can enter the monitor "function" menu, and select the right video format in the "format" option.
- ② The RF signal is too weak.

8.4 Playback the video without sound

- ① No open the audio recording in the DVR menu settings

- ② Volume control did not open, can press the volume button "+",
Try increasing the volume.
- ③ Recording under the "VIDEO" input state, but "AUDIO" is not
AUDIO input signal at the same time.

8.5 Open the RF, no signal detected

- ① Transmitter is working properly or not.
- ② If transmitter frequency matches with the receiver frequency
band
- ③ If customer change the receiving antenna, please note that must
be matched with the transmitter, otherwise may cause receiving
sensitivity is low, even can't receive signals

- Remark: If there are still other problems, please contact with our
Related deals.

★ If there are changes without prior notice.