




# T-3920C RADIO CONTROL INSTRUCTION

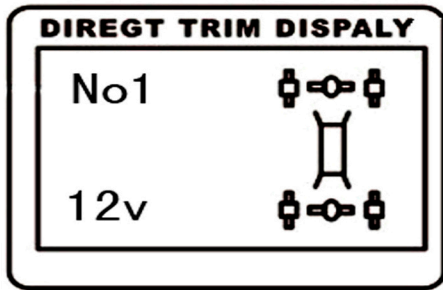


Press SEL button to enter setup menu  
按SEL键进入菜单

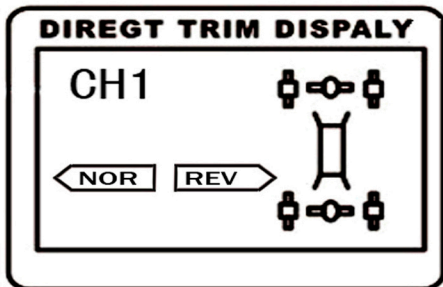



Steering Nor./Rev. Exchange 转向切换

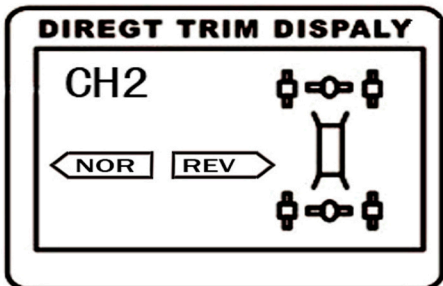


Throttle Nor./Rev. Exchange 前后切换

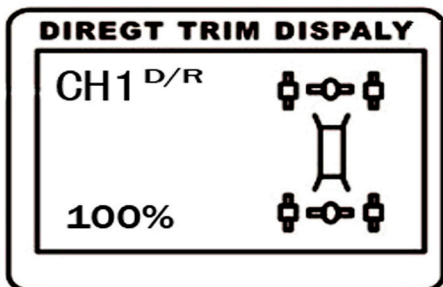


Steering D/R 转向角度比例调整

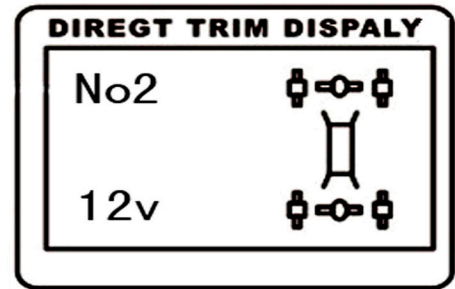 


Mode Exchange 模式转换

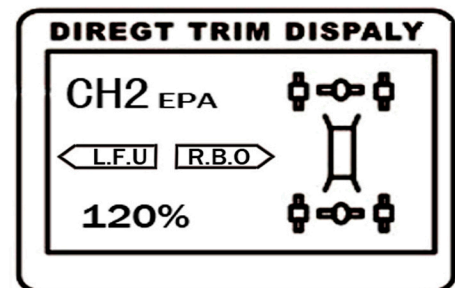

Throttle EPA (forward/back) 前后角度调整

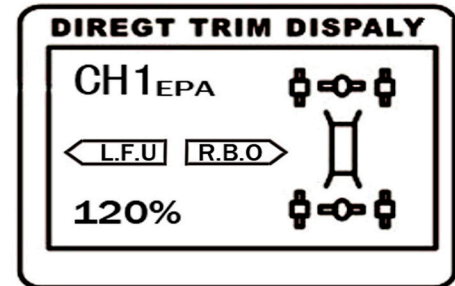

Steering EPR (L/R) 左右角度调整

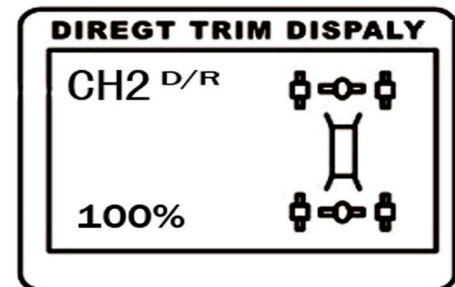

Throttle D/R 前后行程比例调整